

If This Pen Point Does Not Suit Your Handwriting

Waterman's wants you to exchange it for one that does. To aid you in selecting, we list a few of the popular Waterman's pen points.

FLEXIBLE POINTS

MEDIUM WIDTH—For general business, social correspondence and signatures. First choice of the average writer.

FINE—For general use and bookkeeping.

FINE FLEXIBLE—Permits very fine shading. For Pitman shorthand.

STUB—Makes both thick and thin stub strokes.

ROUNDED SPECIAL—For bold signatures. Writes smoothly on any paper in any direction. Preferred by left-hand writers.

FIRM POINTS

MEDIUM FIRM—A sturdy, smooth-writing point. Best for carbon copy work.

FINE FIRM—Makes a fine, uniform line. For Gregg shorthand and accountants.

FINE ACCOUNTANT—Stiff and hairline fine.

Also special points such as Artists' Point—Music Point—Ruling Point. Slight extra charge on certain special points for pens \$5 and under.

Waterman's
Ideal
Fountain Pen

L. E. Waterman Co.

55 Broadway
New York, N. Y.

—
140 Thomas St.
Newark, N. J.

—
30 E. Adams St.
Chicago, Ill.

—
44 School St.
Boston, Mass.

—
609 Market St.
San Francisco

—
263 St. James
Montreal, P. Q.

—
41 Kingsway
London, W.C. 2

—
6 R. Monsigny
Paris, France



 
Waterman's
The Best Ink for
All Writing

Waterman's
How to get Best
Results from your

HOW TO FILL YOUR WATERMAN'S PEN!

1. Immerse pen point in Waterman's Ink as at right.
2. If the filling lever of your Waterman's raises TOWARD THE PEN POINT it is a SINGLE STROKE FILLER. If lever raises AWAY FROM THE PEN POINT it is a MULTIPLE STROKE FILLER.

Caution. Empty and refill new pens several times before using. Always wipe pen point after filling.

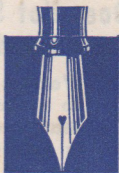

SINGLE STROKE



Raise lever until it is at a right angle to barrel. Then flip lever back to original position while keeping pen point in the ink. Snap into place.

MULTIPLE STROKE



Raise lever half way as illustrated. Then press lever up against barrel SEVEN times, keeping pen point in the ink. Return lever to original position. Snap into place.

HOW TO RELOAD YOUR WATERMAN'S PENCIL



Holding tip firmly, turn barrel to right until metal plunger appears, showing all remaining lead is removed. Then turn barrel to left and insert

new lead well into point, giving slight extra push to force lead all the way in. Pencil will now push out or withdraw lead as required.

Keep Your Waterman's Efficient!

1. Always use Waterman's Ink.
 2. Follow filling directions above.
 3. Fill and empty pen with cold water four times a year.
 4. Keep cap on tight when not using.
 5. Avoid "Home Repairs."
- For adjustment send to reliable repair man or Waterman's.